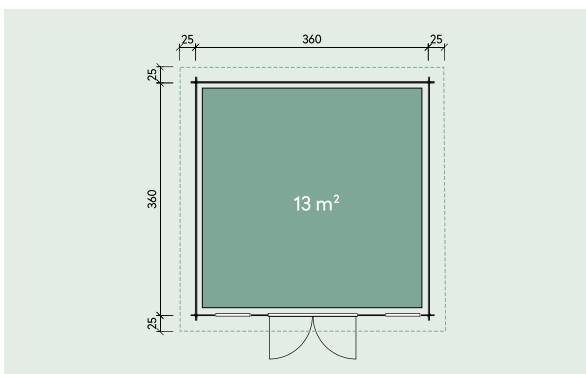


Technische Daten

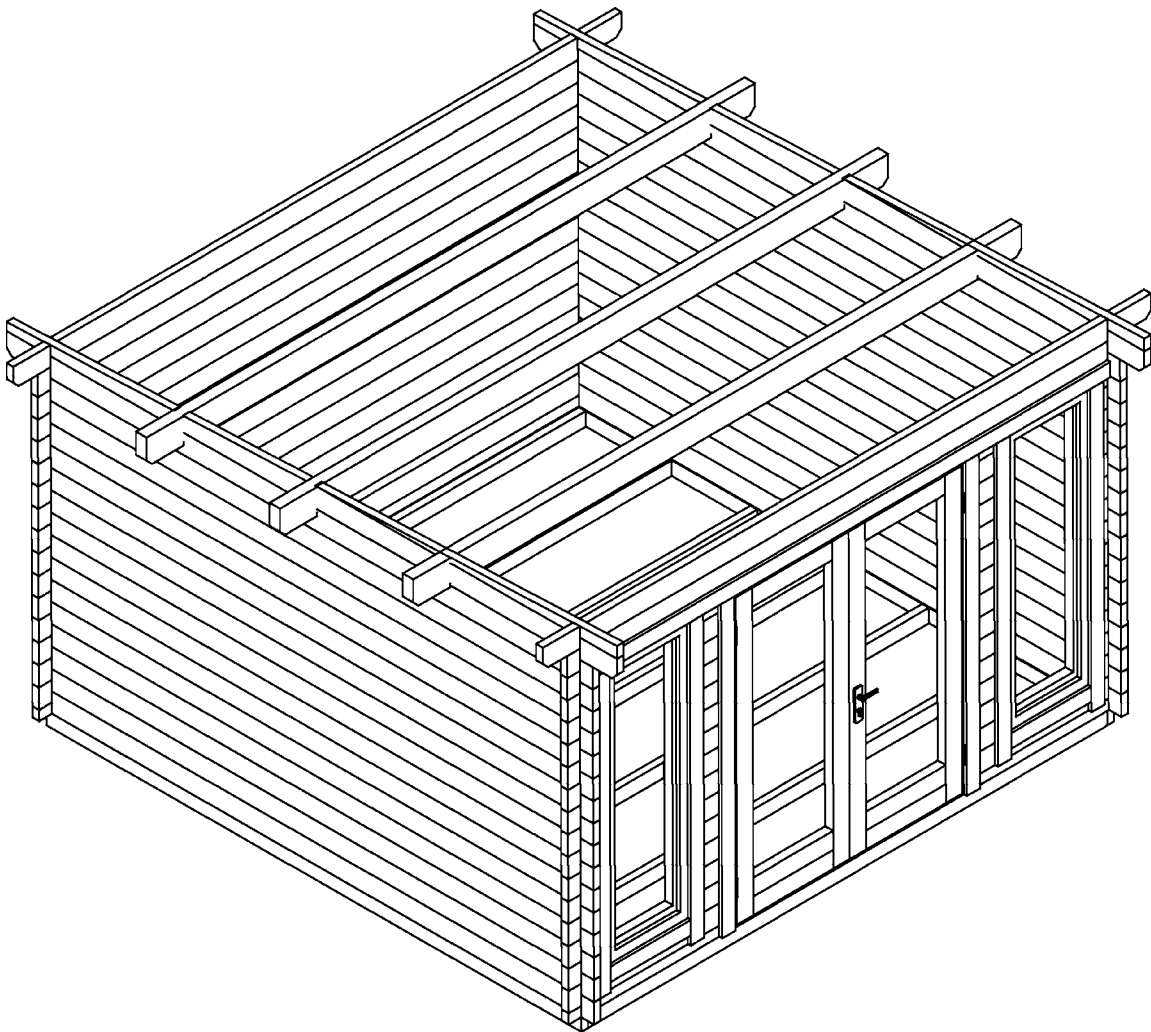


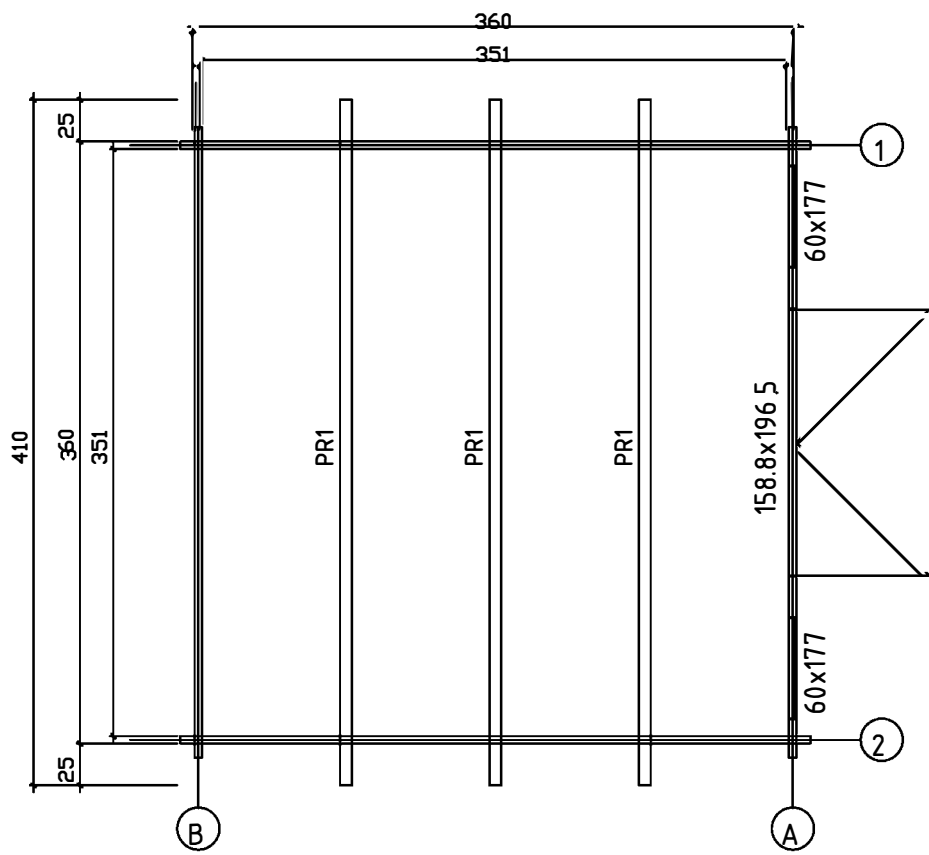
Artikelnummer:

847 210

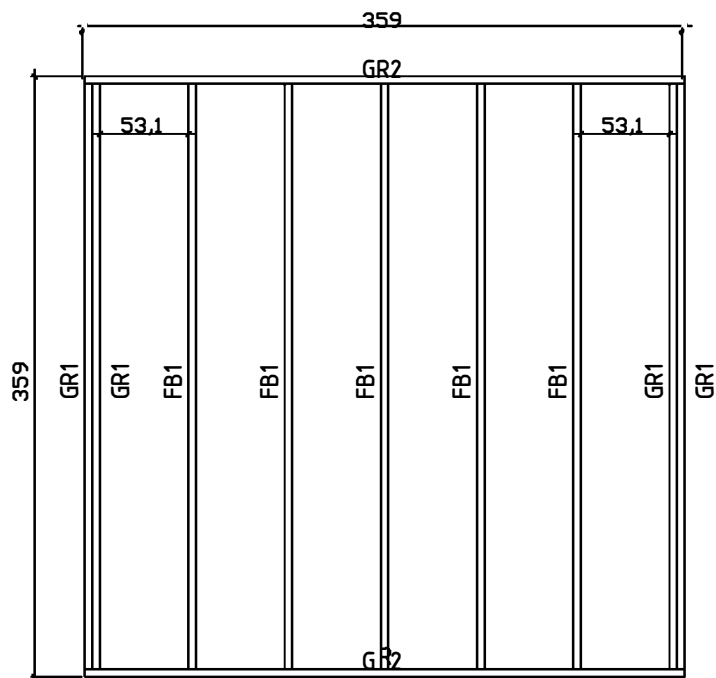




















Kontrolliert durch:










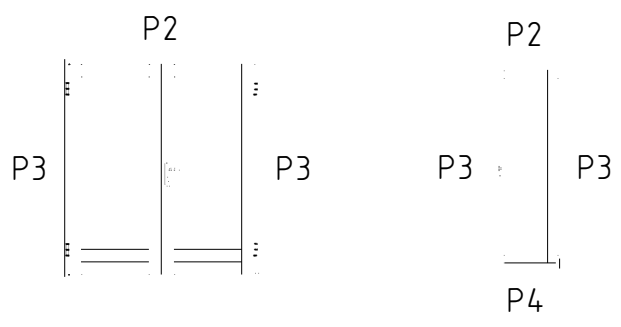





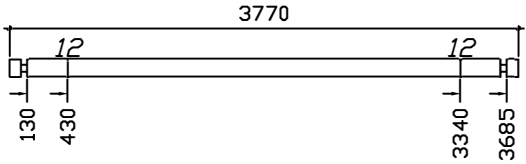
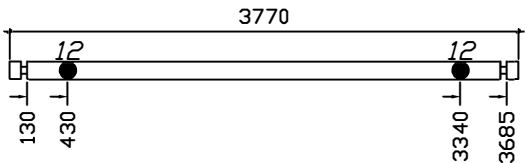
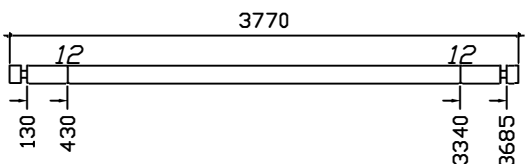
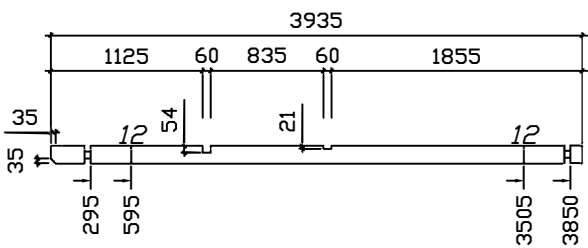
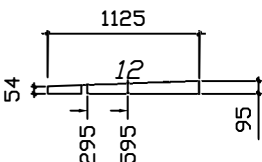
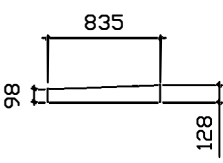

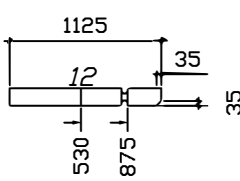
Wir empfehlen als Fundament für Ihr Gartenhaus eine vollflächig festgegründete, gepflasterte oder betonierte Fläche. Wahlweise ist auch ein Punkt- oder Streifenfundament möglich.






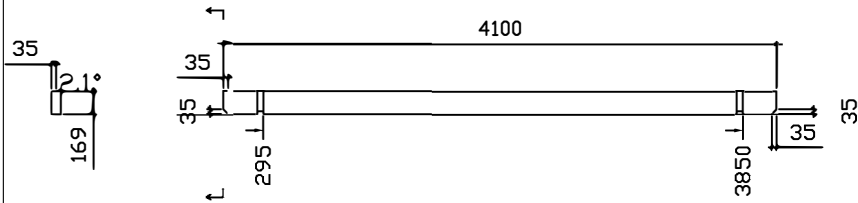
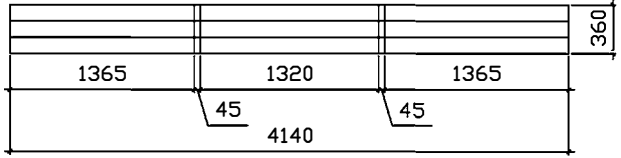
Pos		Quantity	Profil (mm)	Lenght (mm)
001		2	45x130	3770
002		2	45x130	3770
003		26	45x130	3770
004		2	45x130	3935
005		2	45x95	1125
006		2	45x128	835
007		2	45x130	835
008		2	45x130	1125
009		2	45x74	2028
010		2	45x65	1086
011		2	45x130	1086
012		28	45x130	230
013		28	45x130	246
014		16	45x130	3770
015		2	45x130	4100
016		1	45x65	3770
GR2		2	45x90	3590
GR1		4	45x90	3500
FB1		5	45x90	3500
PR1		3	70x170	4100
	WINDOW 600x1770	2		
	DOOR 1588x1965	1		

	PARAPET R1 - 2 pcs.  PARAPET R2 - 2 pcs. 			
1	Screws/Schrauben/Vis 5x100 mm- For fixing first row of wall logs /Fixierung des ersten Bohlenkranzes/Pour fixer les lames de plancher 	6		
2	Nails/Nägels/Clous 2.5x50 - For fixing floorboards/ Befestigung Fussbodenbretter/Pour fixer les lames de plancher 	275		
3	Nails/Nägels/Clous 2.5x50 - For fixing roofboards/ Befestigung Dachbretter/Pour fixer les voliges 	275		
4	Nails/Nägels/Clous 2.5x50 - For fixing floor edge trims/ Befestigung Fussleisten/Pour fixer les plinthes du plancher 	30		
5	Screws/Schrauben/Vis 2,5x50 mm- For fixing parapet / Befestigung parapet / Pour fixer les parapet 	145		
6	Screws/Schrauben/Vis 2,5x50 mm- For fixing window and door trims/ Befestigung Fenster und türen/ Pour fixer les croisillons des fenestres et des portes 			
7	Metal storm Brace/Gewindestange/Tige filetee 8 mm 	4		
8	Shim:Nuts/Mutter ,U-Scheibe/Ecrou;Rondelle 8 mm For fixing storm braces/ Pour fixer les anti tempete/ Für Sturmleisten Pour fixer les croisillons des fenestres et des portes  Metal storm Brace/Gewindestange/Tige filetee 8 mm KL1 M8 2,38m 2 Screws 180 8 pcs. KL2 M8 2,28 m 2 Plastic caps 4 pcs.	4/4		
9	Roofing felt/Dachpappe/Feutre de toiture	10+15		
10	Nails/Nägels/Clous - For fixing roofing felt/ Befestigung Dachpappe/Pour fixer les feutre de toiture 	180		

POS	ST.	B	H	L	Teileliste
FB1	Vt. spetsi				 FUNDMENTHOLZER
F1	12,3m ²	28		3505	 FUSSBODENBRETTER
PR	3	70	170	4100	 DACHBALKEN
RB1	16,8m ²	20		4103	 DACHBRETTER
R1	2	20	360	4140	 PARAPET
R2	2	20	360	4145	 PARAPET
R3	2	45	45	4100	 BEFESTIGUNG DACHBRETTER 
R4	2 2	45	90	250 295	 BEFESTIGUNG PARAPET 
DR1 WN1	1 2	1588 600	1965 1770		
P1	15m	20	40		 Fussbodenleiste
P2	1+1	20	90	3490	 Türleiste DR1,WN1 
P3	6+6	20	90	1945	 Türleiste DR1,WN1 
P4	2+2	20	90	540 570	 Fensterleiste WN1 

45x130	
	001 /2 1.rida
	002 /2
	003 /26
	004 /2
	005 /2 kelp
	006 /2 kelp
	007 /2
	008 /2

	45x130
	009 / 2 kelp
	010 / 2 1.rida poolik
	011 / 2
	012 / 28
	013 / 28
	014 / 16
	015 / 2 pikikalle
	016 / 1 1.rida poolik

GROUNDFRAME  GR2 /2 45x90  GR1 /4 45x90
FLOORBEAMS  FB1 /5 45x90
Purlins  PR1 /3 70x170(60x150)
PARAPET R1 - 2 pcs.  PARAPET R2 - 2 pcs. 