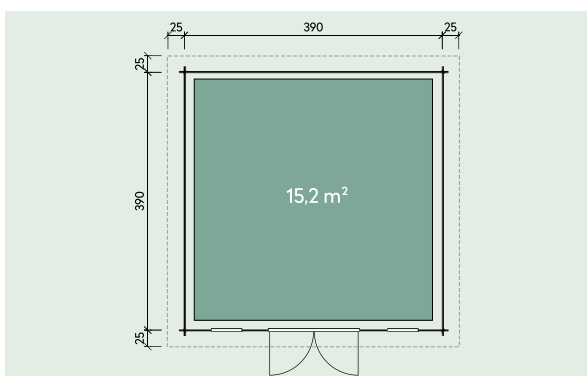


Technische Daten

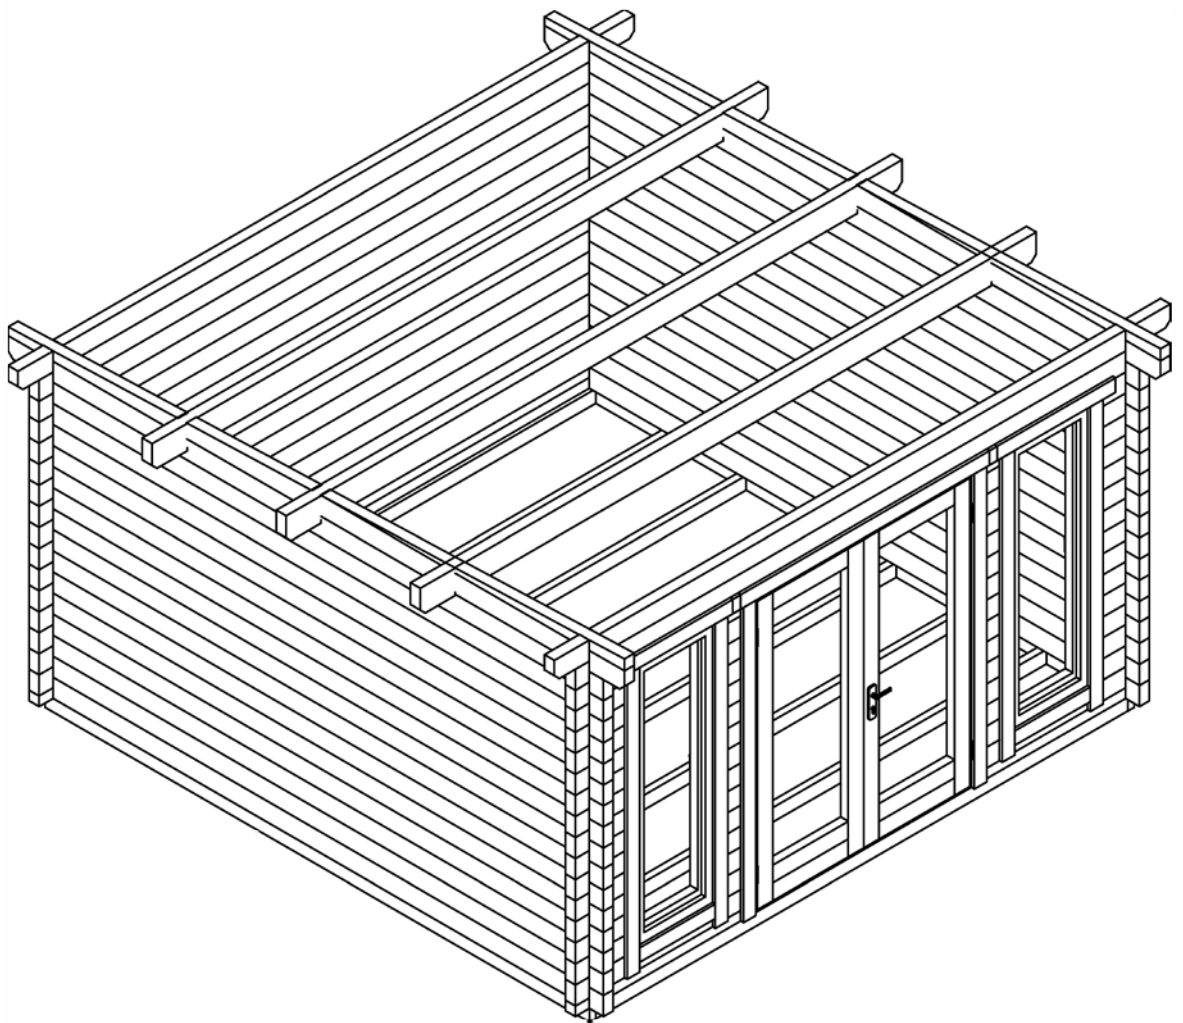


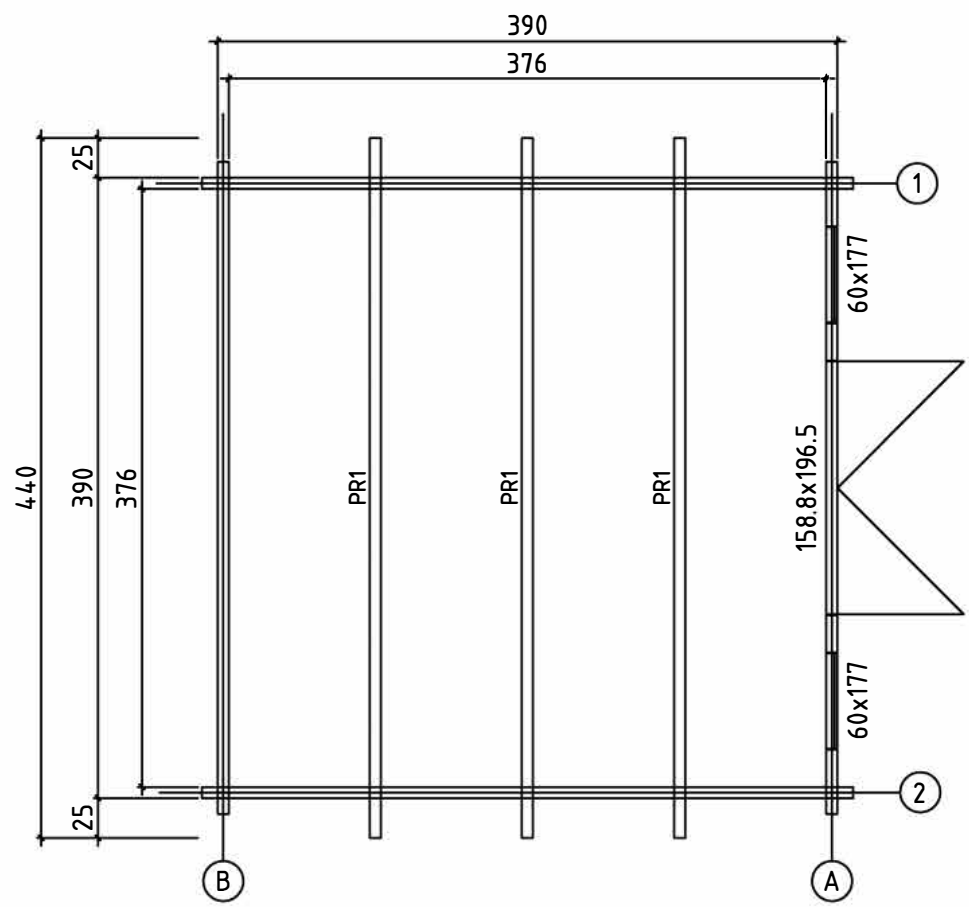
Artikelnummer:

871 520

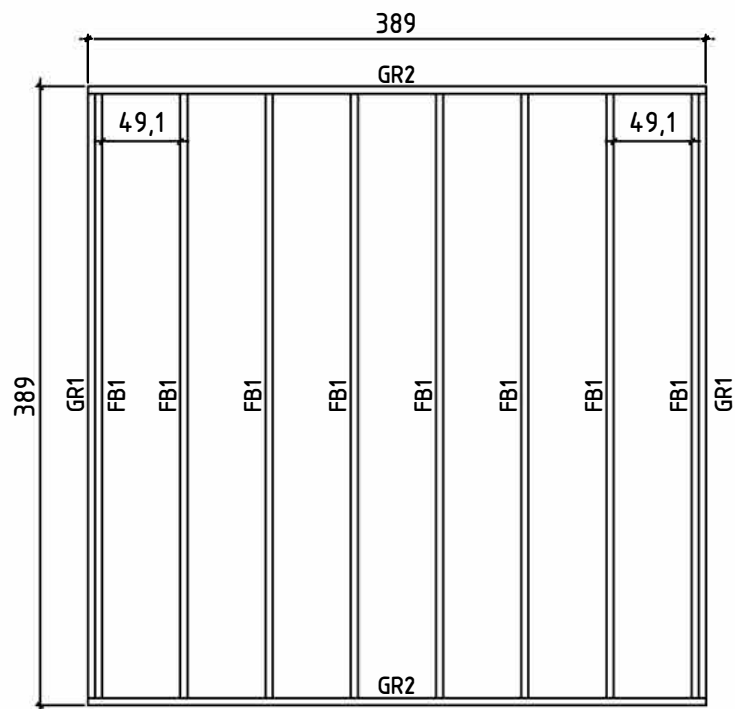
















Kontrolliert durch:








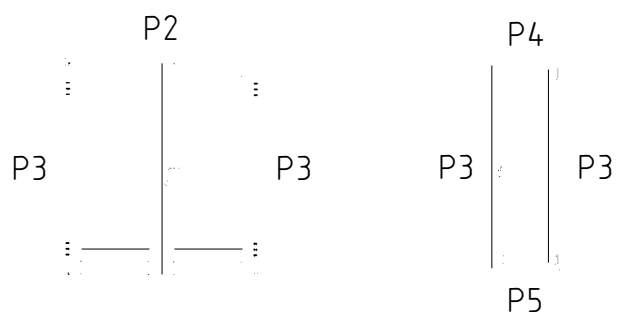


Wir empfehlen als Fundament für Ihr Gartenhaus eine vollflächig festgegründete, gepflasterte oder betonierte Fläche. Wahlweise ist auch ein Punkt- oder Streifenfundament möglich.



Pos		Quantity	Profil (mm)	Lenght (mm)
001		2	70x130	4100
002		2	70x130	4100
003		26	70x130	4100
004		2	70x130	4250
005		2	70x95	1213
006		2	70x128	898
007		2	70x130	898
008		2	70x130	1212
009		2	70x73	2165
010		2	70x65	1251
011		2	70x130	1251
012		28	70x130	406
013		28	70x130	235
014		16	70x130	4100
015		2	70x130	4400
016		1	70x65	4100
GR2		2	45x90	3890
GR1		2	45x90	3800
FB1		8	45x90	3800
PR1		3	70x170	4400
	WINDOW 600x1770	2		
	DOOR 1588x1965	1		

Pos		Quantity	Profil (mm)	Lenght (mm)
	PARAPET R1 - 2 pcs.  PARAPET R2 - 2 pcs. 			
1	Screws/Schrauben/Vis 5x100 mm- For fixing first row of wall logs /Fixierung des ersten Bohlenkranzes/Pour fixer les lamesde plancher 	6		
2	Nails/Nägel/Clous 2.5x50 - For fixing floorboards/ Befestigung Fussbodenbretter/Pour fixer les lames de plancher 	350		
3	Nails/Nägel/Clous 2.5x50 - For fixing roofboards/ Befestigung Dachbretter/Pour fixer les voliges 	300		
4	Nails/Nägel/Clous 2.5x50 - For fixing floor edge trims/ Befestigung Fussleisten/Pour fixer les plinthes du plancher 	30		
5	Screws/Schrauben/Vis 2,5x50 mm- For fixing parapet / Befestigung parapet / Pour fixer les parapet 	180		
6	Screws/Schrauben/Vis 2,5x50 mm- For fixing window and door trims/ Befestigung Fenster und türen/ Pour fixer les croissilons des fenetres et des portes 			
7	Metal storm Brace/Gewindestange/Tige filetee 8 mm 	4		
8	Shim,Nuts/Mutter ,U-Scheibe/Ecrou,Rondelle 8 mm For fixing storm braces/ Pour fixer les anti tempete/ Für Sturmleisten Pour fixer les croissilons des fenetres et des portes     Metal storm Brace/Gewindestange/Tige filetee 8 mm KL1 M8 2,38 m 2 Screws 180 8 pcs. KL2 M8 2,28 m 2 Plastic caps 4 pcs.	4/4		
9	Roofing felt/Dachpappe/Feutre de toiture	10+15		
10	Nails/Nägel/Clous - For fixing roofing felt/ Befestigung Dachpappe/Pour fixer les feutre de toiture 	210		

POS	ST.	B	H	L	Teileliste
FB1	Vt. spetsi				 FUNDMENTHOLZER
F1	14,1m ²	28		3755	 FUSSBODENBRETTER
PR	3	70	170	4400	 DACHBALKEN
RB1	19,4m ²	20		4403	 DACHBRETTER
R1	2	20	360	4440	 PARAPET
R2	2	20	360	4445	 PARAPET
R3	2	45	45	4400	☐ BEFESTIGUNG DACHBRETTER 
R4	2 2	45	90	250 295	☐ BEFESTIGUNG PARAPET 
DR1 WN1	1 2	1588 600	1965 1770	 Sliding slats 30x30x1720 mm - 4 pcs.	
P1	16m	20	40		 Fussbodenleiste
P2	1+1	20	90	1890	 Türleiste DR1 
P3	6+6	20	90	1945	 Türleiste DR1,WN1 
P4	2+2	20	90	900	 Fensterleiste WN1 